



User Manual

1500W Fog Machine (Adjustable Angle)

TL-SL601




Guangdong BaoLun Electronics Co., Ltd.

Tel: 020-84788607

Fax: 020-84788607

www.itctech.com.cn

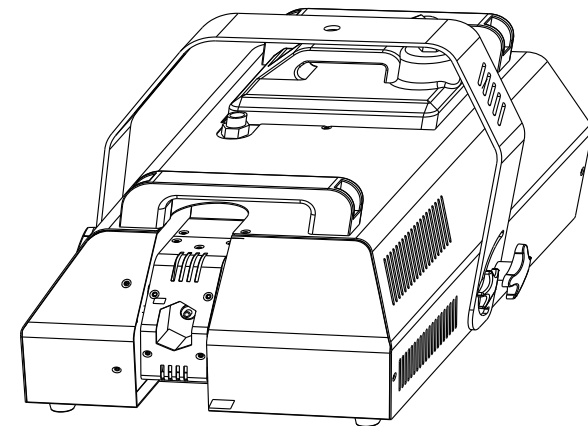

Date: December 10, 2024 Version: V1.1

Note: The technical parameters in this manual are subject to change without prior notice

Please read this manual in detail before usage.

Precautions for Use

- 1.The fog machine must be placed in a ventilated place and cannot be used in a hole, otherwise the temperature of the fog machine will be overheated, the temperature control insurance will be disconnected, and the fog machine will not be heated.
- 2.The fog machine can be placed flat on the ground, or installed at a high place parallel to the ground, but it cannot be installed obliquely. There should be at least a 30CM space around the fog machine, which is conducive to the heat dissipation.
- 3.It should be installed in a place that children cannot touch, away from flames and flammable and explosive materials, and 40CM away from the nozzle to prevent burns.
- 4.It is normal for all fog machines to emit a small amount of smoke (some even have a slight burnt smell) during the heating process.
- 5.If the fog output becomes smaller, the suction pump makes noise or it cannot spray fog, cut off the power immediately. And then check the liquid amount, fuse, connecting wire and power plug. If the problem cannot be solved, please contact the dealer.
- 6.Do not let the machine work when no one is there. Do not add flammable liquids, such as oil, gas and fragrance. When the machine is working, do not touch the wires, so as to avoid electric shock.
- 7.Please make sure that there is no liquid and metal foreign matter entering the inside of the machine before each startup. If there is any fault, please contact the dealer. After use, it must be cooled for at least one hour before putting it in the box.
- 8.The fog machine should be regularly maintained every 1-2 months. The specific maintenance is: after using the machine, spray 3 to 5 times with 20% white vinegar and 80% distilled water!
- 9.Take good care of the remote control accessories of the fog machine. If they are lost, the factory generally does not provide accessories for free!
- 10.The accessories of each fog machine manufacturer cannot be used for other brands of fog machines, otherwise it will be damaged!
- 11.When adding liquid, care must be taken to prevent the liquid from flowing into the machine. Before transportation, pay attention to empty the liquid tank and dry the machine!

Precautions: Check and clean the smoke nozzle and oil pump regularly every 3 months to ensure that the smoke pipe and oil pipe are unobtrusive and not blocked.

Product Specifications

Features:

1. Output gear/adjustment range: 1-100
2. Maximum fog output: about 26,600 cubic feet per minute
3. Maximum spray distance: about 6m
4. Maximum liquid consumption: about 7 min/L
5. Maximum continuous output time (100 outputs): about 30 seconds
6. Spray angle: 0-130° adjustable
7. Equipped with mechanical temperature control and electronic temperature control

Parameters:

1. Input voltage: AC 220-240V 50/60Hz, 1500W
2. Fuse: 10A/250V
3. Working current: 6.5 A
4. Preheating time: about 4.0 minutes
5. Heater type (heating aluminum/quick heater): heating aluminum
6. Liquid tank volume: 4.0 L
7. Control mode: DMX512 control, remote control
8. Channel: 2CH
- 9.. Protection class: IP20
10. Product size (L×W×H): 528×397×316mm
11. Package size (L×W×H): 615×430×340mm
12. Gross weight: 18.0kg
13. Net weight: 16.0kg

Panel Control Interface

(1) The MENU key is used as the return key. Press it to return to the previous menu; press the ENTER key to select the value to be modified and save the current mode. The following modes and values are saved by pressing the ENTER key, otherwise they will not be saved after power off.

(Note: Enter the bottom of the menu level, press the ENTER key to return the cursor to the previous level to indicate successful saving, and the words "Saving..." will be displayed at this time.

(2) Press the MENU key and the ENTER key at the same time to quickly switch between Chinese and English

(3) Press the Timer shortcut key to set the timing function

(4) Press the Volume shortcut key to set the fog volume. Remember to set this function when using the timing function and wireless control.

Primary menu	Secondary menu	Tertiary menu
Dmx Addr	Dmx Addr	
Address code 001	Address code 001-512	
ManualMode	Smoke_amount	Smoke_amount
	0%	0-100%
	Angle 000	Angle 0-255
Timing Setting	Timing Setting	Timing Setting
	S:00	S:0-60
	M:00	M:0-60
	H:00	H: 0-24
	Timing Continue	Timing Continue
	S:00	S:0-60
	M:00	M:0-60
	H:00	H: 0-24
Smoke_amount Setting	Smoke_amount	
	0-100%	
	Angle 000	Angle 0-255
Tank_Light	ON/OFF	
Smoke_machine Info	Heater Temp	Heater Temp
		Xxx°C
	Software Version	1U-V1.xx2U-V1.xx
	Reset	Angle ERROR/OK
	Info	

Channel Table

(1) The MENU key is used as the return key. Press it to return to the previous menu; press the ENTER key to select the value to be modified and save the current mode. The following modes and values are saved by pressing the ENTER key, otherwise they will not be saved after power off.

(Note: Enter the bottom of the menu level, press the ENTER key to return the cursor to the previous level to indicate successful saving, and the words "Saving..." will be displayed at this time.

(2) Press the MENU key and the ENTER key at the same time to quickly switch between Chinese and English

(3) Press the Timer shortcut key to set the timing function

(4) Press the Volume shortcut key to set the fog volume. Remember to set this function when using the timing function and wireless control.

2CH	Channel	Channel value	Function/Effect
CH1	Fog volume	0-100	OFF
		101-255	Fog volume from less to more
CH2	Angle	000-255	Adjust the spray angle

Dimensional Drawing

