

SWING GATE OPERATOR

INSTALLING AND OPERATING MANUAL

XBSPK06




**PLEASE READ THE MANUAL CAREFULLY
BEFORE INSTALL AND USE**

1. WARNING TO THE INSTALLER AND USER

- 1.1 CAUTION! It is important for personal safety to follow all the instructions carefully. Incorrect installation or misuse of the product may cause people serious harm.
- 1.2 Keep the instructions in a safe place for future reference.
- 1.3 This product was designed and manufactured strictly for the use indicated in this documents. any other not expressly indicated use may damage the product and/or be a source of danger.
- 1.4 Before carrying out any work on the system, switch off the electricity supply.
- 1.5 Accepts no responsibility regarding safety and correct operation of the automation ,should components made by manufacturers other than be used in the system.
- 1.6 Do not make any alterations to the components of the automation.
- 1.7 Do not allow children or other persons to stand near the product while in operation.
- 1.8 Keep remote controls away from children, to prevent the automation from being activated accidentally.
- 1.9 The user must refrain from attempting to repair or adjust the system personally and should contact qualified personnel only.
- 1.10 Frequently examine the installation, in particular check cables, springs and mountings for signs of wear, damage or imbalance .Do not use if repair or adjustment is needed since a fault in installation or an incorrectly balanced door may cause injury.
- 1.11) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 1.12 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 1.13 Disconnect the supply when cleaning or other maintenance is being carried out, if the appliance is automatically controlled.
- 1.14The temperature range marked on the drive should be suitable for the location.

**PLEASE READ THE MANUAL CAREFULLY
BEFORE INSTALL AND USE**


2.Description:

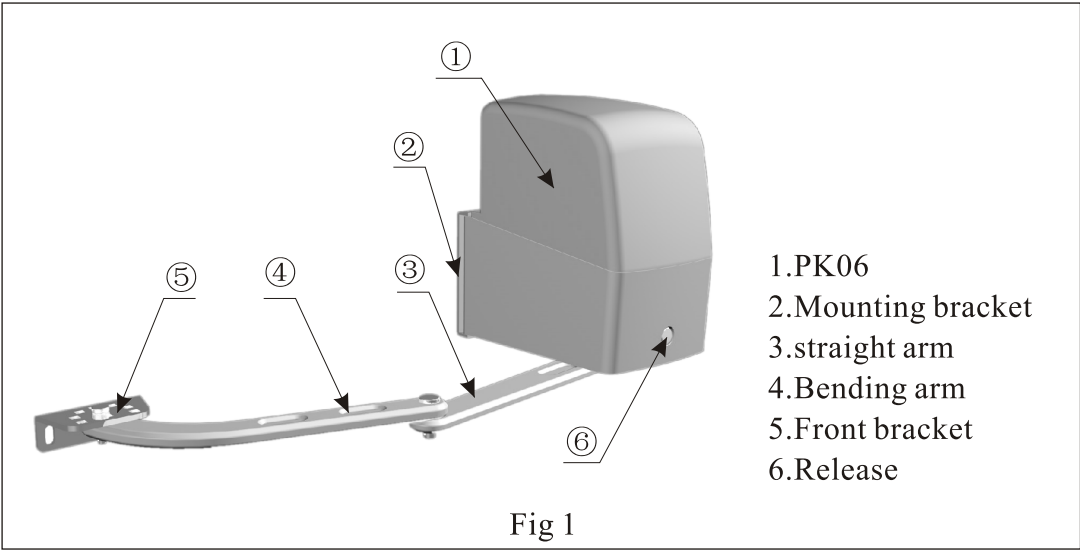





3.Technical Specifications:

Supply voltage	127V 60HZ
Power of motor	24V DC 40W
Current	2A
Rotational speed	1800RPM
Max leaf length	3m
Environment Temperature range	-20℃ ~+50℃
Protection class	Ip44
Continual run time	5Min

4.Dimensions:

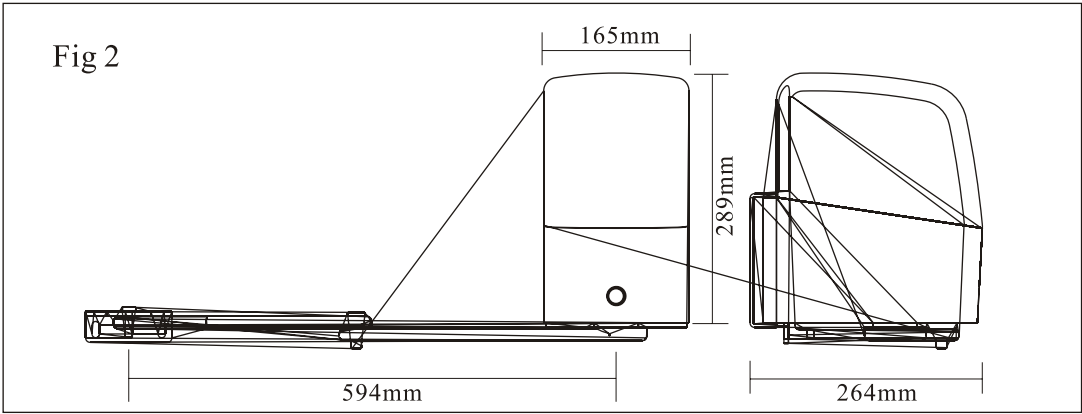

    5.Package list: _____

 1 pcs	 Bending arm 1 pcs  straight arm 1 pcs	
 1 pcs	 $\phi 8 \times 4$ pcs	 M8 $\times$ 45mm 2 pcs
	 $\phi 8 \times 4$ pcs $\phi 10 \times 1$ pcs	
 1 pcs	 M8 $\times$ 6 pcs	 M10 $\times$ 100mm 4 pcs
	 M10 $\times$ 20mm 1 pcs	
 1 pcs	 M8 $\times$ 30mm 2 pcs	 M8 $\times$ 160mm 2 pcs

6.Installation:


6.1: Tools: _____




FIG 4




6.4: Fix the mounting bracket

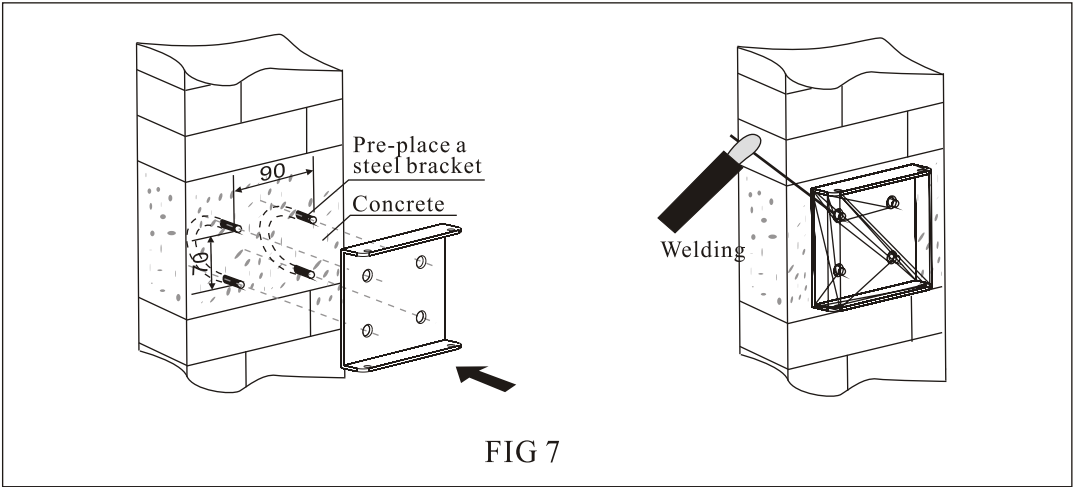


6.5 Fix the straight arm

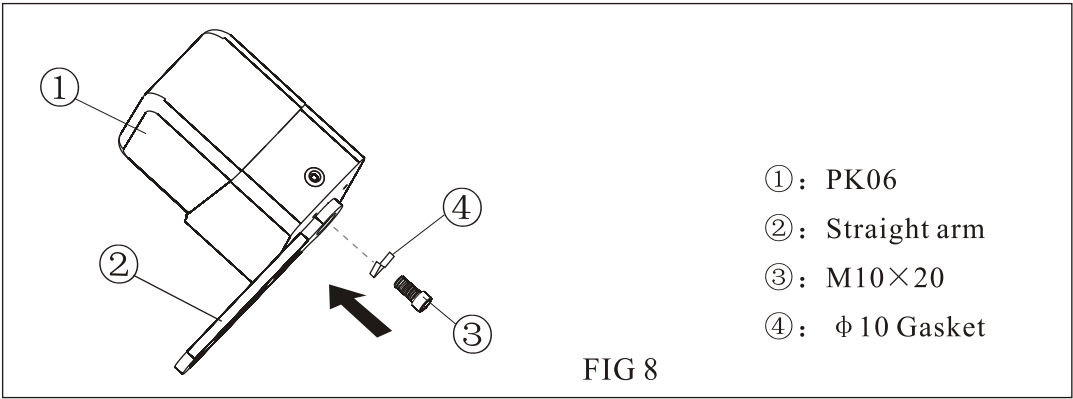


6.6 Fix the Motor's(PK06)

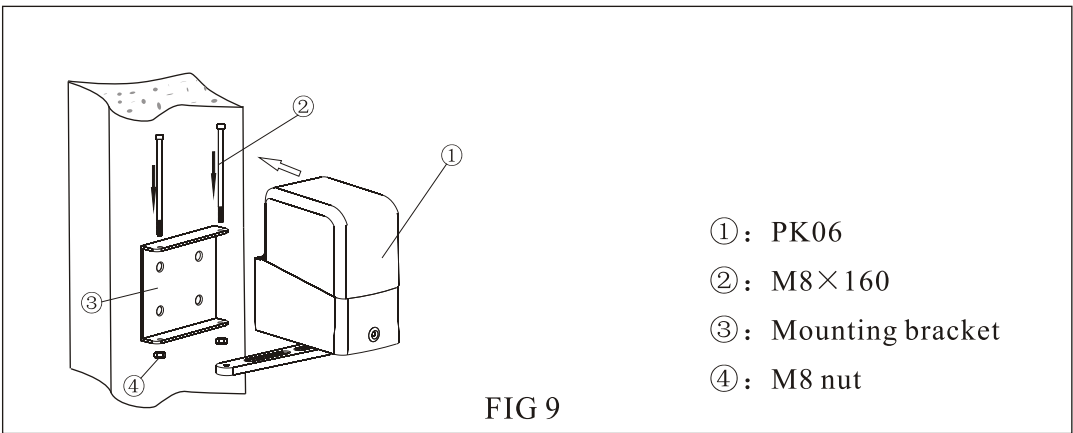

6.7 Connect the bending arm

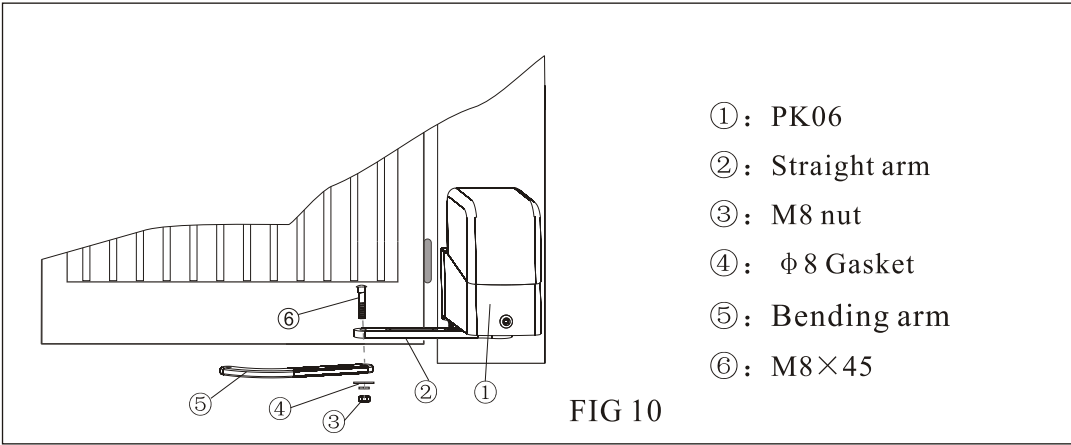


6.8 Connect the Front Bracket


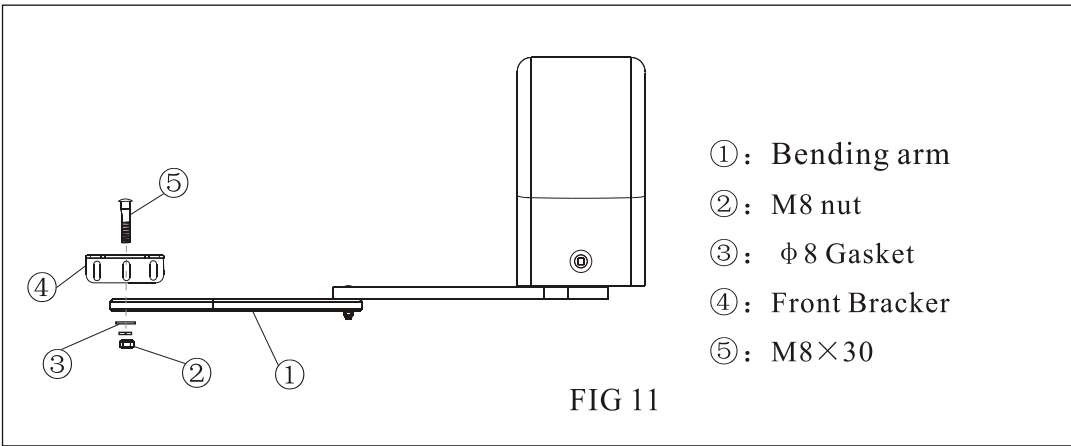


After installation, ensure that the mechanism is properly adjusted and that the protection system and any manual release function correctly.

6.9 How to release

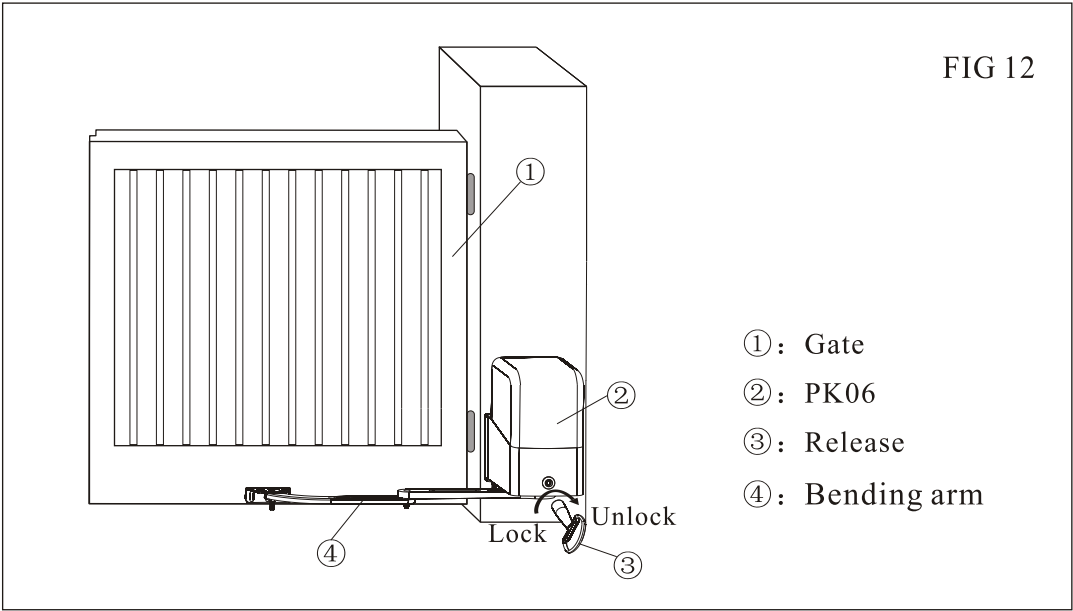



6.9 Fix the Front Bracket

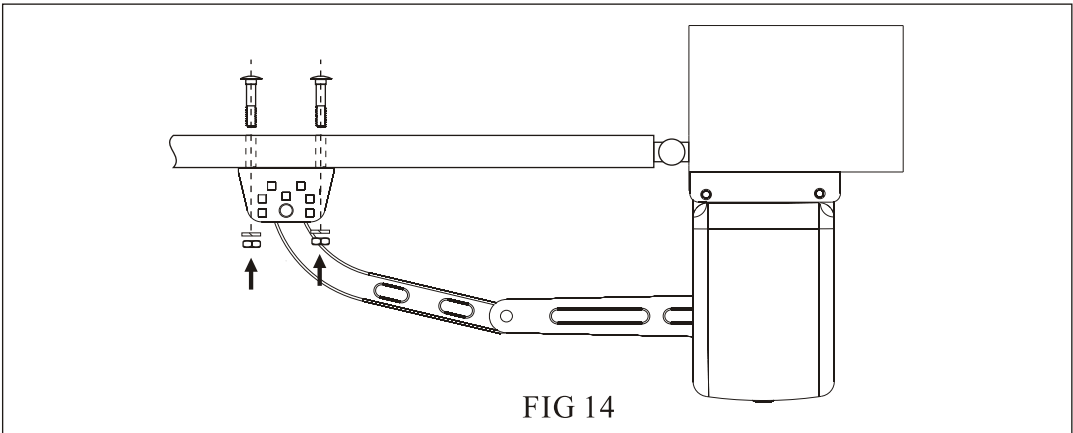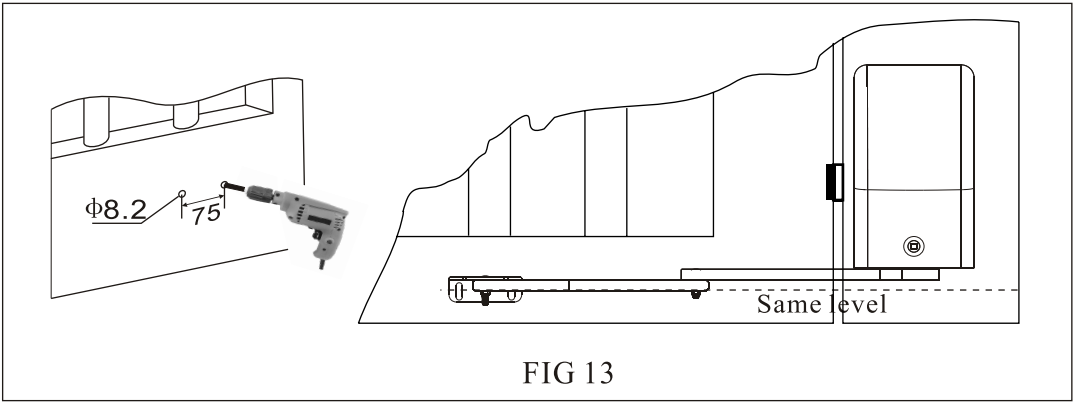


7.Limit switch adjustment

Attention: If the operator move in an opposition way, you should change the connection as follow:

The billowing is a Right motor's limit switch adjustment, Before adjusting, release the gears, and open the gate manually. For left motor, all directions are contrary

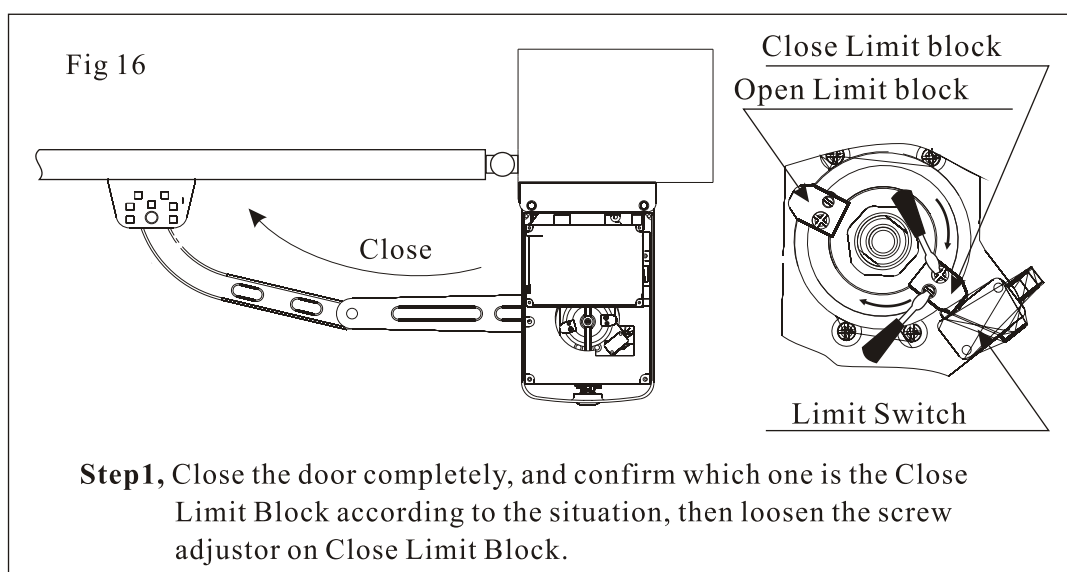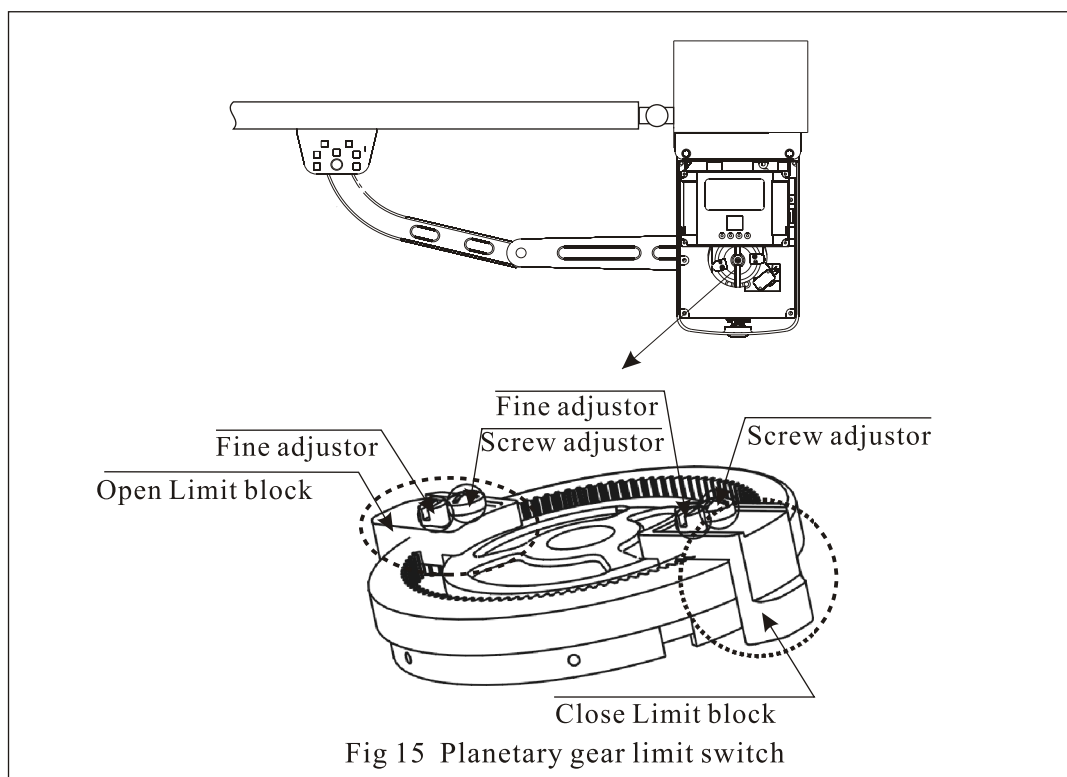

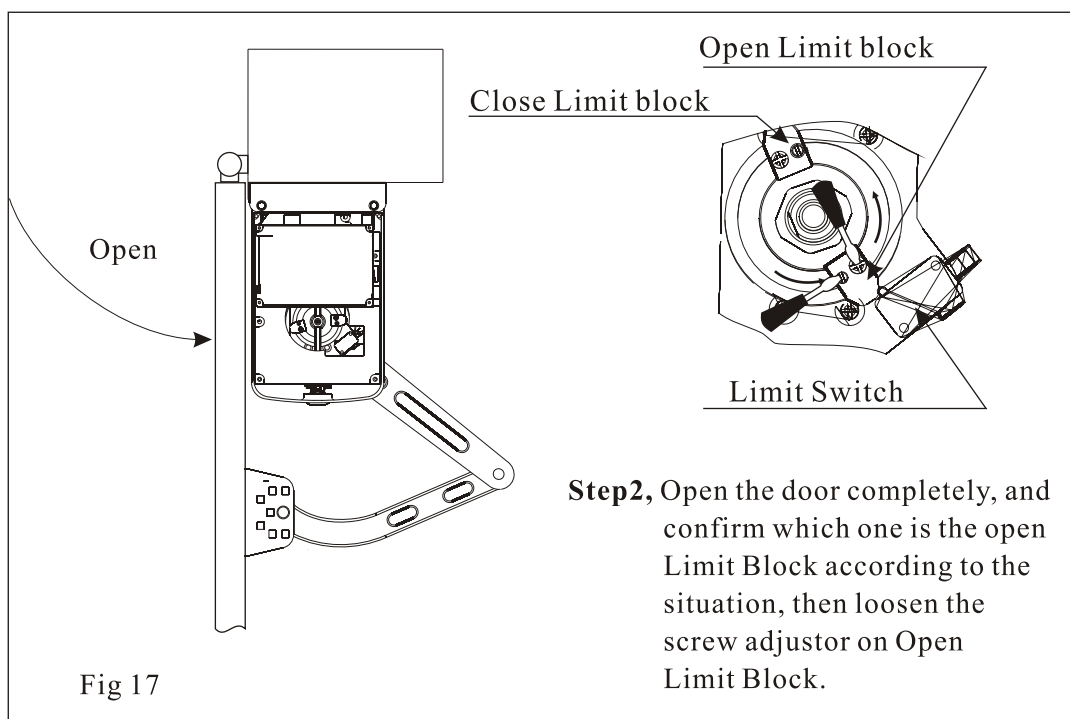

Step3, Couple the gears, turn on the power adjust more accurately by "Fine adjustor", then tighten the "Screw adjustor"

